



# HT-602B CRIMPING TOOL FOR MOST POPULAR NON-INSULATED TERMINALS

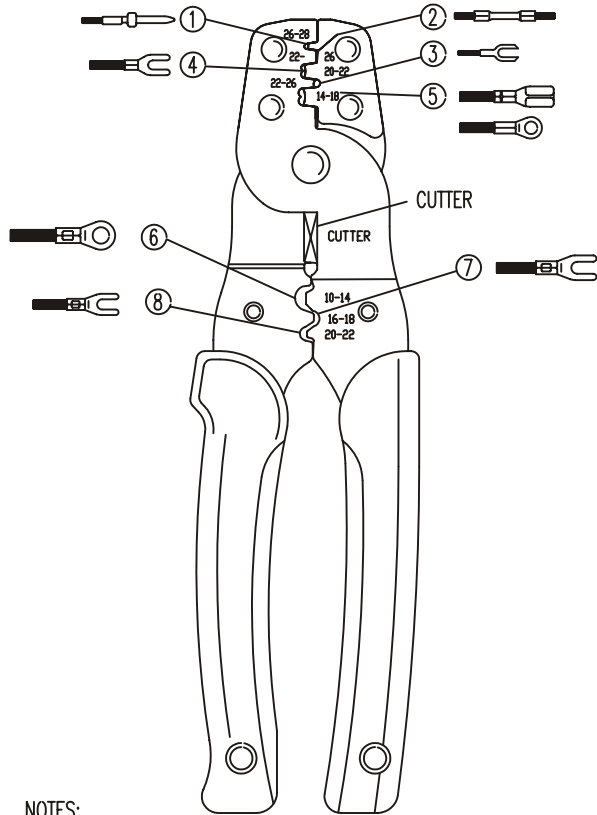

- NOTES:
1. For computer pins & sockets, D-sub 26-28 AWG wire.
  2. For butt-insulated connectors, 22-26 AWG wire.
  3. For telephone spade lugs, 22-26 AWG wire.
  4. For non-insulated connectors, 20-22 AWG wire.
  5. For non-insulated connectors, 14-18 AWG wire.
  6. For non-insulated terminals, 5.5sq. 10-14 AWG wire.
  7. For non-insulated terminals, 2sq. 16-18 AWG wire.
  8. For non-insulated terminals, 0.35sq. 20-22 AWG wire.

# HT-602A CRIMPING TOOL FOR MOST POPULAR NON-INSULATED TERMINALS

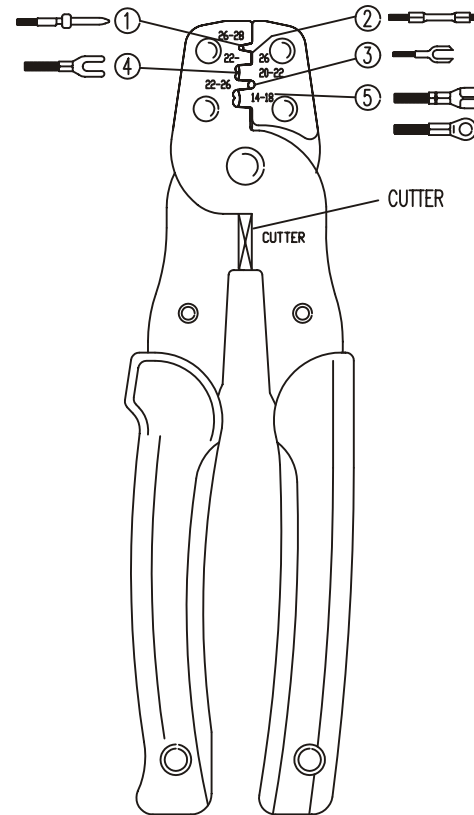

- NOTES:
1. For computer pins & sockets, D-sub 26-28 AWG wire.
  2. For butt-insulated connectors, 22-26 AWG wire.
  3. For telephone spade lugs, 22-26 AWG wire.
  4. For non-insulated connectors, 20-22 AWG wire.
  5. For non-insulated connectors, 14-18 AWG wire.

**MORETHANALL**  
CONNECTORS  
ASSEMBLIES

PART NO. HT-602A(B)

DWG NO. HT-602A(B)

FILE NO.


UNIT / mm

SCALE 1:1

CHECKED BY CY

DRAWING BY

PROJECTION



TOLERANCES ARE

.X ±  
.XX ±  
.XXX ±  
AWG

DESCRIPTION:

AREA

REVISIONS

HK

DATE

煜倫有限公司